


Lonas laterales y popa estándar



Referencia	H	Longitud Bimini
58950	700	1500
58951	700	2000
58952	700	2200
58953	700	2350
58954	700	3000

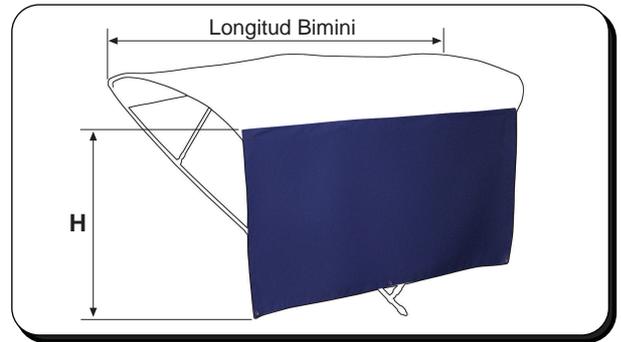

Referencia
5901



Pequeño herraje en forma de pinza de muy fácil instalación, diseñado para instalar en cualquier modelo de bimini

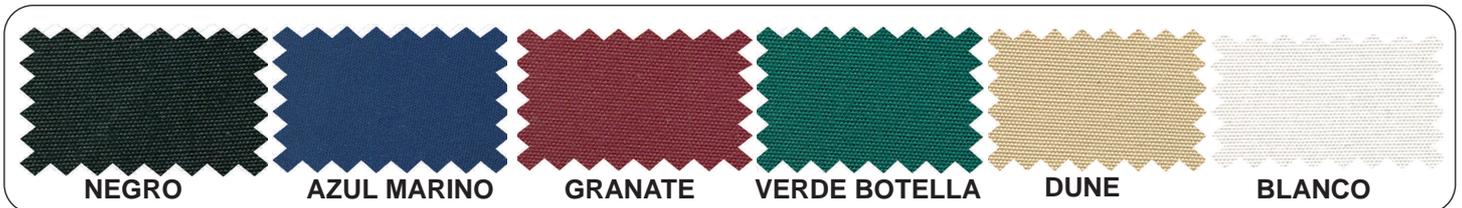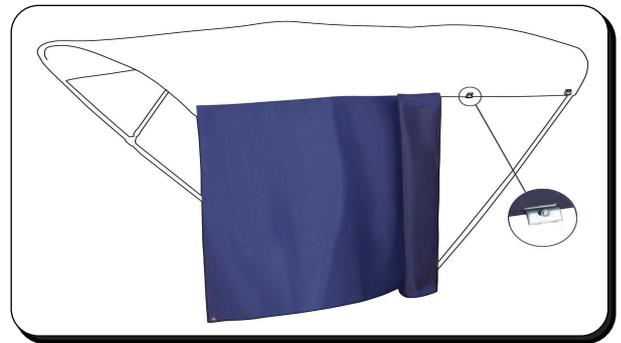


Referencia	A	Anchura de bimini
58980	700	1550
58981	700	1750
58982	700	1850
58983	700	2000
58984	700	2100
58985	700	2250
58986	700	2350
58987	700	2450
58988	700	2550



DETALLES DE MONTAJE




GOMAS
La lona se tensa lateralmente mediante 2 gomas anudadas al tubo

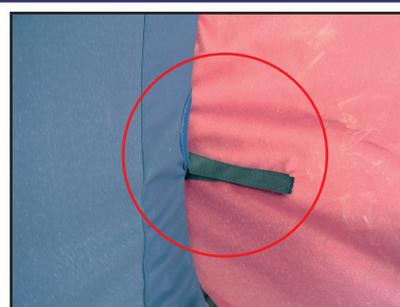

VELCROS
Mediante 2 velcros se sujeta a la abertura del bimini

Kit avanzado para biminis

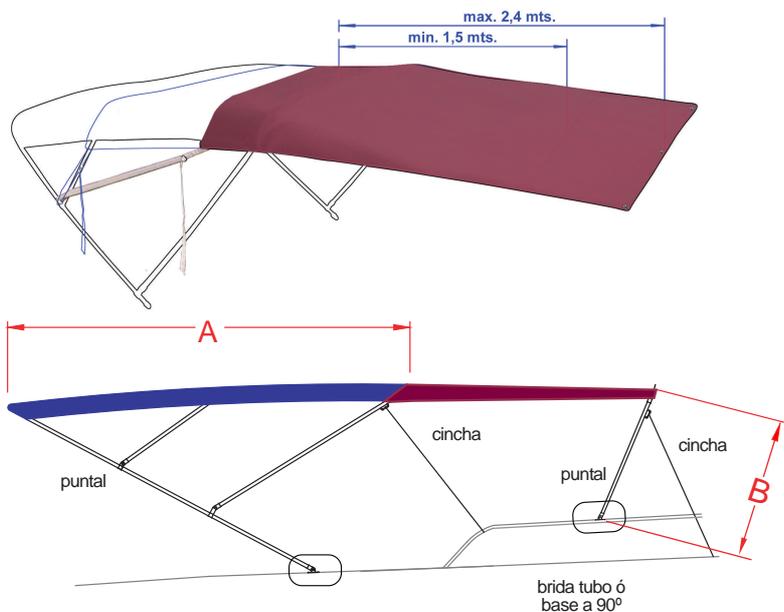

SISTEMAS DE SUJECIÓN



BASES A ELEGIR





Un kit completo incluye:

- 1 lona (color a elegir).
- 2 Tubos puntales ref:58910.
- 2 Cinchas ref:53001.
- 2 Bases a elegir.

REF. KIT AVANCÉ

Referencia	A	Anchura de bimini
58899	2400	1550
58900	2400	1750
58901	2400	1850
58902	2400	2000
58903	2400	2100
58904	2400	2250
58905	2600	2350
58906	2600	2450
58907	2600	2550

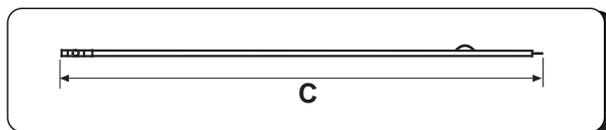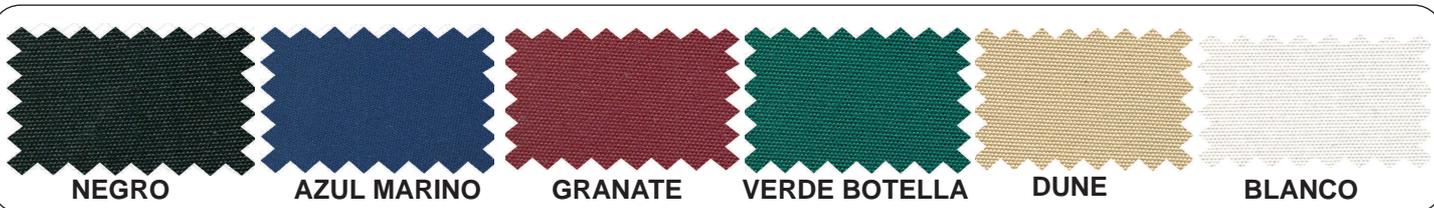

Referencia	C	ØTubo
58910	1100	22

